


FALSE CEILING TRIM KIT INSTALLATION MANUAL


FALSE CEILING TRIM KIT COMPONENTS provided in the packaging:

- 2 white long L-form pre-punched profiles 50x30x3 mm pre-punched (A)
- 4 threaded rods, 1m long (B)
- 2 ceiling mounting brackets (C)
- 3 white U-form supports (D)
- 2 white side doors (E)
- 2 white mounting plates (F)

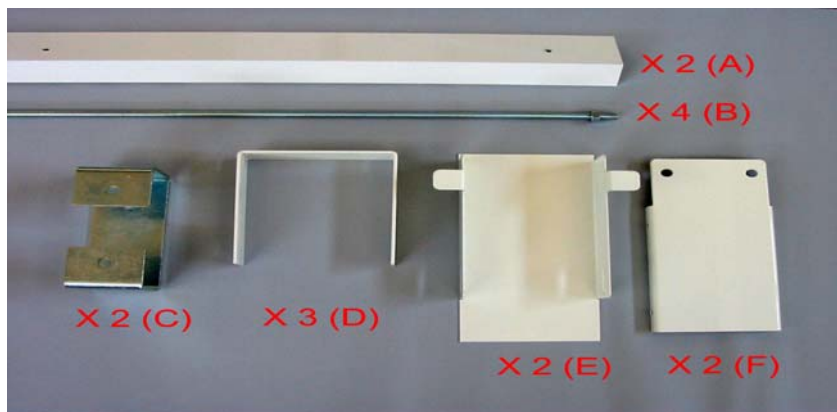


Before starting to mount the trim kit, cut a rectangular hole in the false ceiling in order to position the screen and the trim kit. Afterwards, drill holes in the concrete ceiling above for fixing the ceiling mounting brackets and the whole trim kit. Depending on the model of trim kit supplied, please follow the instructions, paying attention to the position of the screen's bottom bar in relation to the false ceiling:

1) Cut the hole in the false ceiling according to the chart below, following the figure 1a.

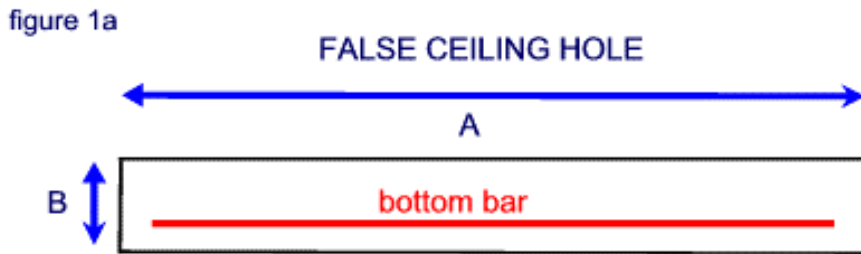

| Screen Model | Width of Screen | | Dimension A | | Dimension B | |
|---|-----------------|-------|-------------|-------|-------------|------|
| | cm | inch | cm | inch | cm | inch |
| B-Lite 6 | 180 | 70.9 | 221 | 87 | 12.5 | 4.9 |
| Home-View 16:9 format | 160 | 63.0 | 211 | 83.1 | 12.5 | 4.9 |
| | 180 | 70.9 | 231 | 90.9 | 12.5 | 4.9 |
| | 200 | 78.7 | 251 | 98.8 | 12.5 | 4.9 |
| | 250 | 98.4 | 301 | 118.5 | 12.5 | 4.9 |
| | 300 | 118.1 | 351 | 138.2 | 12.5 | 4.9 |
| Home-View 4:3 format & Pro-View up to 244 cm (96 inch) screen | 160 | 63.0 | 211 | 83.1 | 12.5 | 4.9 |
| | 180 | 70.9 | 231 | 90.9 | 12.5 | 4.9 |
| | 200 | 78.7 | 251 | 98.8 | 12.5 | 4.9 |
| | 250 | 98.4 | 301 | 118.5 | 12.5 | 4.9 |
| | 300 | 118.1 | 353 | 139.0 | 15.5 | 6.1 |
| Home-View Tensioned | 160 | 63.0 | 230 | 90.6 | 12.5 | 4.9 |
| | 180 | 70.9 | 250 | 98.4 | 12.5 | 4.9 |
| | 200 | 78.7 | 270 | 106.3 | 12.5 | 4.9 |
| | 250 | 98.4 | 320 | 126.0 | 12.5 | 4.9 |
| | 300 | 118.1 | 372 | 146.5 | 15.5 | 6.1 |
| Major 400/450 | 400 | 157.5 | 453 | 178.3 | 15.5 | 6.1 |
| Major 400/450 Tensioned | 400 | 157.5 | 472 | 185.8 | 15.5 | 6.1 |
| | | | | | | |
| | | | | | | |

2) Drill the holes in order to fix the ceiling brackets (C) to the concrete ceiling, following the chart in figure 2a. According to the rectangular hole in the false ceiling, mark the following positions:

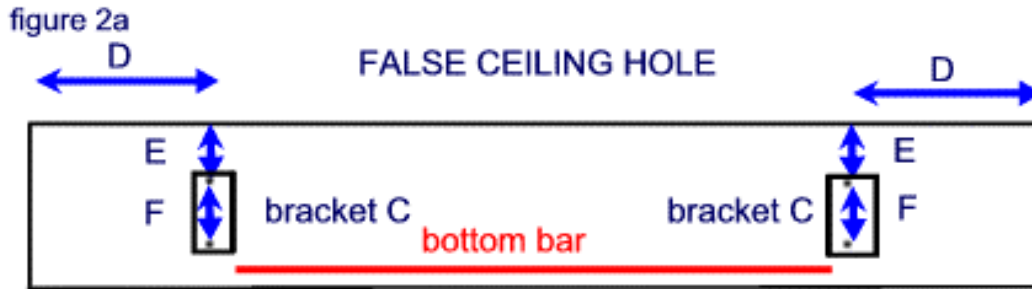

| Screen Model | Width of Screen | | Dimension D | | Dimension E | | Dimension F | |
|---|-----------------|-------|-------------|------|-------------|------|-------------|------|
| | cm | inch | cm | inch | cm | inch | cm | inch |
| B-Lite 6 | 180 | 70.9 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| Home-View 16:9 format | 160 | 63.0 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 180 | 70.9 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 200 | 78.7 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 250 | 98.4 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 300 | 118.1 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| Home-View 4:3 format & Pro-View up to 244 cm (96 inch) screen | 160 | 63.0 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 180 | 70.9 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 200 | 78.7 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 250 | 98.4 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 300 | 118.1 | 13.5 | 5.3 | 5.7 | 2.2 | 7 | 2.8 |
| Home-View Tensioned | 160 | 63.0 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 180 | 70.9 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 200 | 78.7 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 250 | 98.4 | 13.5 | 5.3 | 4.5 | 1.8 | 7 | 2.8 |
| | 300 | 118.1 | 13.5 | 5.3 | 5.7 | 2.2 | 7 | 2.8 |
| Major 400/450 | 400 | 157.5 | 13.5 | 5.3 | 5.7 | 2.2 | 7 | 2.8 |
| Major 400/450 Tensioned | 400 | 157.5 | 13.5 | 5.3 | 5.7 | 2.2 | 7 | 2.8 |
| | | | | | | | | |
| | | | | | | | | |

Once you have drilled the holes correctly, you can then proceed to assemble the trim kit:

- 3) Mount the three U-form supports (D) on the two L-form profiles (A) using the screws provided in the pre-punched holes (see fig. 3a); afterwards mount the two side doors (E) on the two ends left and right of the L-form profiles (see fig. 3b).

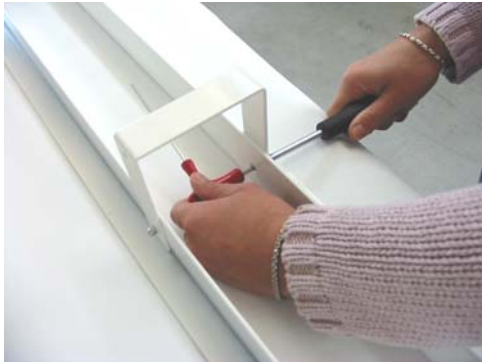


figure 3a



figure 3b

- 4) After assembling the structure, place it over the screen housing (see fig. 4a) and then fix the structure to the screen housing, using the six screws provided, through the three U-form supports (see figure 4b).



figure 4a



figure 4b

5) Fix the mounting plates tightly (F) to the left and right top sides of the screen housing, ensuring that the plates are mounted in the exact position as shown on figure 5a and 5b.



figure 5a



figure 5b

6) Mount the ceiling brackets (C) to the concrete ceiling (see figure 6a), using the holes drilled before, according the chart 2A.


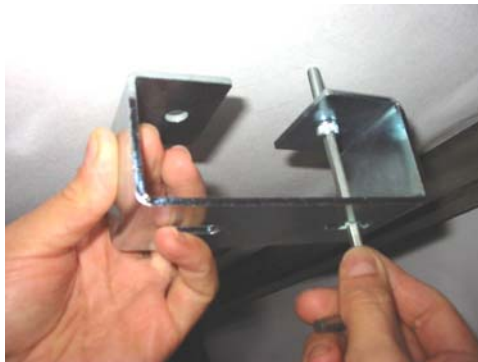


figure 6a

7) Cut the threaded rods (B) to the desired length, considering the height of the ceiling bracket (C) and the height (G) as shown in the drawing below.

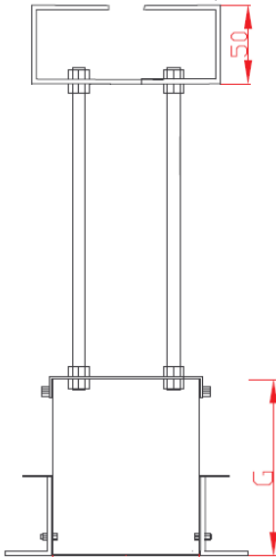

| Screen Model | Width of Screen | | Dimension G | |
|---|-----------------|-------|-------------|------|
| | cm | inch | cm | inch |
| B-Lite 6 | 180 | 70.9 | 11.7 | 4.6 |
| Home-View 16:9 format | 160 | 63.0 | 11.7 | 4.6 |
| | 180 | 70.9 | 11.7 | 4.6 |
| | 200 | 78.7 | 11.7 | 4.6 |
| | 250 | 98.4 | 11.7 | 4.6 |
| | 300 | 118.1 | 11.7 | 4.6 |
| Home-View 4:3 format & Pro-View up to 244 cm (96 inch) screen | 160 | 63.0 | 11.7 | 4.6 |
| | 180 | 70.9 | 11.7 | 4.6 |
| | 200 | 78.7 | 11.7 | 4.6 |
| | 250 | 98.4 | 11.7 | 4.6 |
| | 300 | 118.1 | 13.7 | 5.4 |
| Home-View Tensioned | 160 | 63.0 | 11.7 | 4.6 |
| | 180 | 70.9 | 11.7 | 4.6 |
| | 200 | 78.7 | 11.7 | 4.6 |
| | 250 | 98.4 | 11.7 | 4.6 |
| | 300 | 118.1 | 13.7 | 5.4 |
| Major 400/450 | 400 | 157.5 | 13.7 | 5.4 |
| Major 400/450 Tensioned | 400 | 157.5 | 13.7 | 5.4 |
| | | | | |
| | | | | |

8) Open the side doors of the trim kit, insert the whole structure in the rectangular hole and fix tightly the four threaded rods to the two mounting plates (see figure 8a) with the bolts supplied. Once you finish these operations, close the two side doors and align them to the left and right ends of the L-form profiles (see figure 8b).



figure 8a

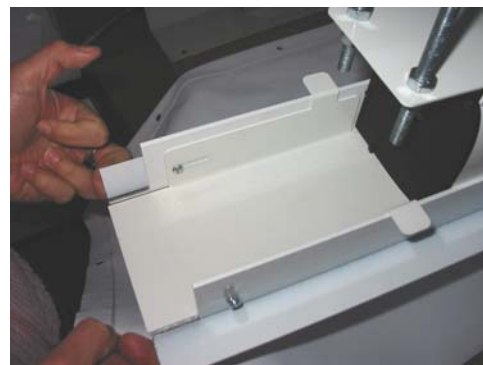


figure 8b

The installation of your False Ceiling Trim Kit is now complete.